



37 085 PI0 **SERVO DISCHARGE VALVE**

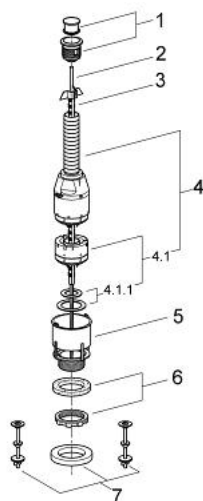

SPARE PARTS, October 2008 – now

- 1: Push button and escutcheon (Spare part-nr. 37115PI0)
- 2: Push bar 350 mm (Spare part-nr. 43535000)
- 3: Pop-up rod (Spare part-nr. 43540000)
- 4: Servo discharge valve (Spare part-nr. 43486000)
- 4.1: Outlet piston (Spare part-nr. 43544000)
- 4.1.1: Sealing washer (Spare part-nr. 43808000)
- 5: Seat (Spare part-nr. 43533000)
- 6: Sealing washer (Spare part-nr. 43745000)
- 7: Fastening set (Spare part-nr. 43741000)

37 085 PI0 **SERVO DISCHARGE VALVE**

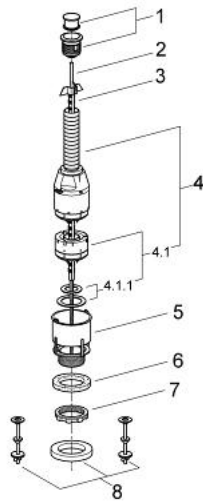

SPARE PARTS, December 2003 – October 2008

- 1: Push button and escutcheon (Spare part-nr. 37115PI0)
- 2: Push bar 350 mm (Spare part-nr. 43535000)
- 3: Pop-up rod (Spare part-nr. 43540000)
- 4: Servo discharge valve (Spare part-nr. 43486000)
- 4.1: Outlet piston (Spare part-nr. 43544000)
- 4.1.1: Sealing washer (Spare part-nr. 43808000)
- 5: Seat (Spare part-nr. 43533000)
- 6: Sealing washer (Spare part-nr. 43745000)
- 7: Nut (Spare part-nr. 43311000)
- 8: Fastening set (Spare part-nr. 43741000)