


38 732 BR0 **SKATE COSMOPOLITAN FLUSH PLATE**

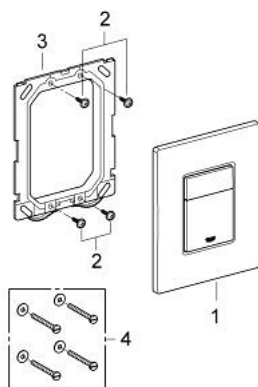

SPARE PARTS, July 2009 – now

1: Top plate with push button (Spare part-nr. 42371BR0)

2: Screw (Spare part-nr. 6636200M)

3: Frame (Spare part-nr. 43207000)

4: Fixing set (Spare part-nr. 4308500M)*

* Optional accessories