



38 784 000 **SKATE COSMOPOLITAN ACTUATION PLATE**

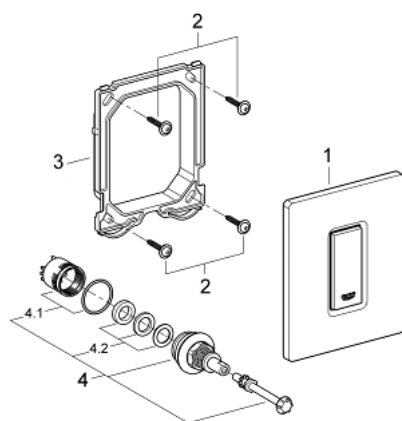

SPARE PARTS, March 2012 – now

- 1: Top plate with push button (Spare part-nr. 42377000)
- 2: Screw (Spare part-nr. 6636200M)
- 3: Frame (Spare part-nr. 66845000)
- 4: Cartridge (Spare part-nr. 42354000)
- 4.1: Replacement kit for seal (Spare part-nr. 4271500M)
- 4.2: Rings (Spare part-nr. 4282000M)


38 784 000 **SKATE COSMOPOLITAN ACTUATION PLATE**

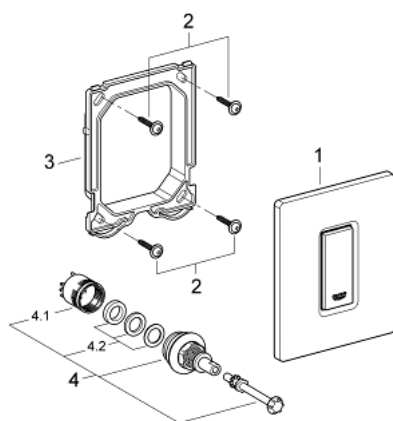

SPARE PARTS, February 2010 – March 2012

- 1: Top plate with push button (Spare part-nr. 42377000)
- 2: Screw (Spare part-nr. 6636200M)
- 3: Frame (Spare part-nr. 66845000)
- 4: Cartridge (Spare part-nr. 42354000)
- 4.1: Replacement kit for seal (Spare part-nr. 4271500M)
- 4.2: Rings (Spare part-nr. 4282000M)

38 784 000 **SKATE COSMOPOLITAN ACTUATION PLATE**

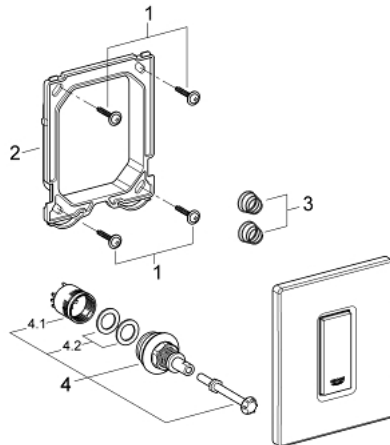

SPARE PARTS, March 2008 – February 2010

- 1: Screw (Spare part-nr. 6636200M)
- 2: Frame (Spare part-nr. 66845000)
- 3: Spring (Spare part-nr. 4235500M)
- 4: Cartridge (Spare part-nr. 42354000)
- 4.1: Replacement kit for seal (Spare part-nr. 4271500M)
- 4.2: Rings (Spare part-nr. 4282000M)